

R100 Controlled Door Closer




- PLEASE READ FITTING INSTRUCTIONS THOROUGHLY
BEFORE INSTALLATION.**

PERKO POWERMATIC®


The Third Generation Concealed Door Closer

PARTS LIST

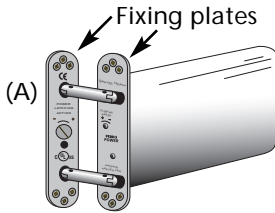

Door Closer - x 1

(B)

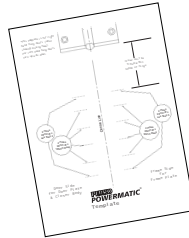

Template - x 1

(C)




Allen Keys - x 2

(D)



Screws - x 12

(E)

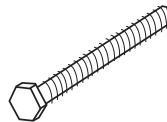

Extractor Bolt - x 1

(F)



Allen Key for Adjuster Screw (Locking) x 1

CHECK ALL COMPONENT PARTS AGAINST PARTS LIST.

TOOLS REQUIRED

- Screwdriver (Plain Slotted)
- Screwdriver (Phillips)
- Wood Chisel 25mm x 185mm/1" x 7"
- Solid Centre Auger Bit or Spade Bits 26mm Ø and 28mm Ø 11/16" Ø and 11/8" Ø
- Bradawl
- Power Drill
- Tape Measure
- Pencil
- Adjustable Spanner
- Ruler

The use of a dedicated morticing tool is highly recommended for multiple installations.

Order code R98.XX which includes everything you need.

Eye Protectors, Ear Defenders and a Face Mask are recommended during installation of Perko-Powermatic®.

1 IMPORTANT NOTICE

DOOR CLOSERS FITTED TO A FIRE DOOR.

- Perko Powermatic,[®] conforms to Power Size 3 of Controlled Door Closing Device Standard BS EN1154:1997 when the power latching action is set to maximum.

- Turn adjuster screw fully to positive (+) as explained in 9.

- Closer must be fitted no more than 750mm/30" from floor and within 300mm/12" of a hinge.

- Closer and plates should be bedded in Alfacyrl FR Intumescent Acrylic Mastic available from Samuel Heath.

2 TEMPLATE POSITIONING


- Ensure door is plumb, hinges are free, and that timber is sound.
- Take template provided and fold along center line. Open door to 90°.
- Secure template to door edge and frame edge within 300mm/12" of a hinge ensuring the center line is central in line with the pivot point of the hinge.

- Draw a vertical line at the center point of the door edge on the template.

NB This line must not exceed 35mm/1 3/8" from template centre line.

See Fig. 2

Fig. 1

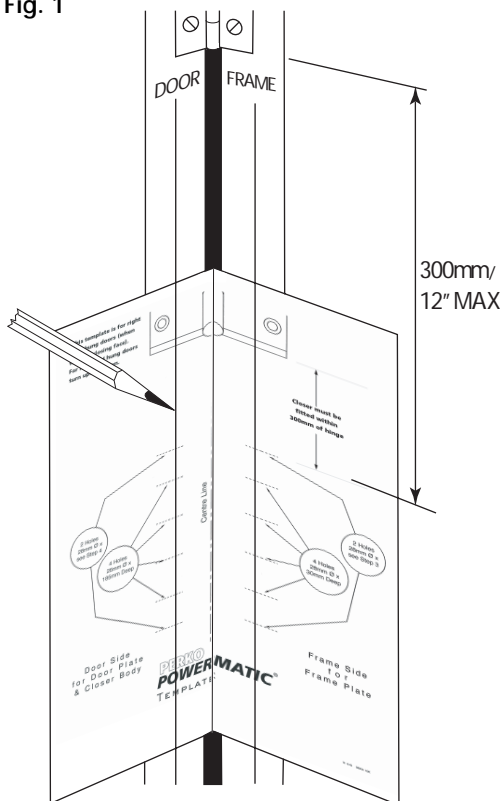


- Repeat this vertical line onto the frame side at the same distance from centre line.

- At each point on the template where the vertical lines cross the horizontal dotted lines mark through the template using a bradawl into the door edge and frame edge to establish drilling points. Remove template RETAIN FOR REFERENCE.

- Note: Door can now be removed from frame to assist drilling if preferred.


To achieve a maximum opening angle of 105° the centre of the closer must be no more than 35mm/1³/₈" from the pivot point of the hinge.

Fig. 2

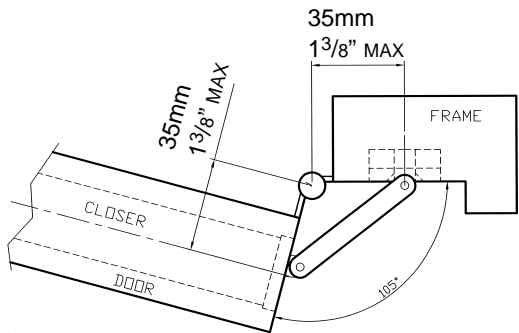


IMPORTANT

To ensure the 35mm/1³/₈" distance is not exceeded the closer and fixing plate can both be offset in the door leaf and jamb (closer to the hinge pivot point) by up to a maximum of 6mm/1/4" as illustrated below.

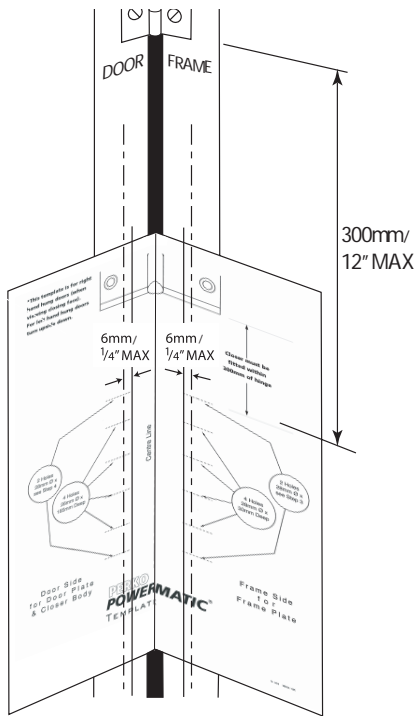


3 FRAME PREPARATION FOR FRAME PLATE

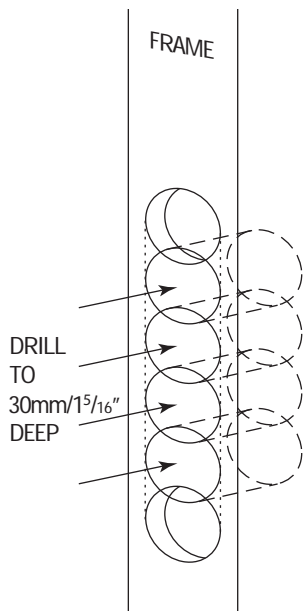

NB *To ensure correct operation of closer there must be a 3mm/1/8" gap between the two fixing plates when the door is in the closed position. These instructions are based on the gap between door and frame being 3mm \pm 1.0mm.*


- Drill 4 x 28mm/1 1/8" \varnothing holes x30mm/1 5/16" deep to accept frame plate assembly as indicated on template.
- Drill 2 x 28mm/1 1/8" \varnothing holes x5mm deep to accept frame plate ends.
- Remove excess timber between drilled holes to accommodate frame plate.

4 DOOR PREPARATION FOR BODY & DOOR PLATE

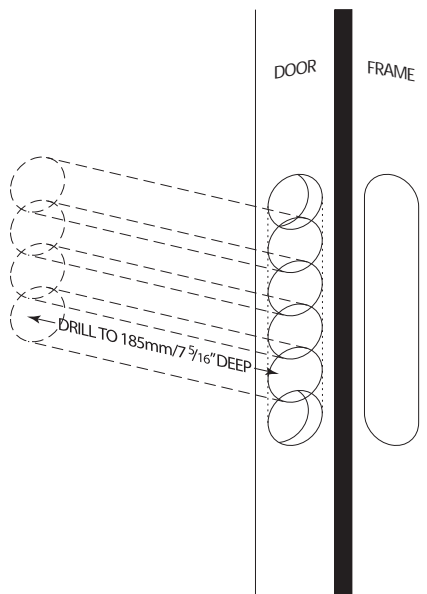


- Drill 4 x 26mm/1 1/16" \varnothing x 185mm/7 5/16" deep holes to accept closer body as indicated on the template.
- Drill 2 x 28mm/1 1/8" \varnothing holes x5mm to accept door plate ends.
- Remove excess timber between drilled holes to accept the closer body and door plate.

5 INSTALLING CLOSER

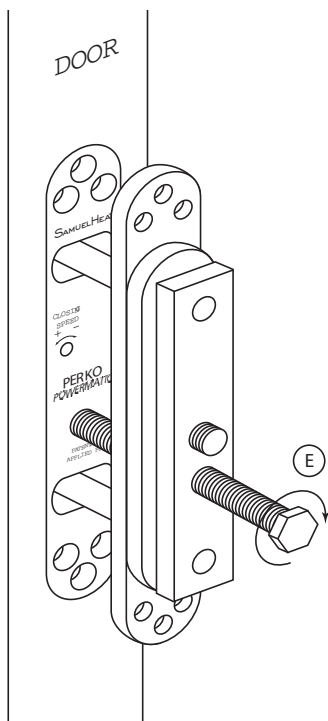

- Insert closer body into door.
- Insert extractor bolt (E) into position and rotate clockwise until holes in link rods appear.
- Generally for thicker doors expose both holes on each rod.

6

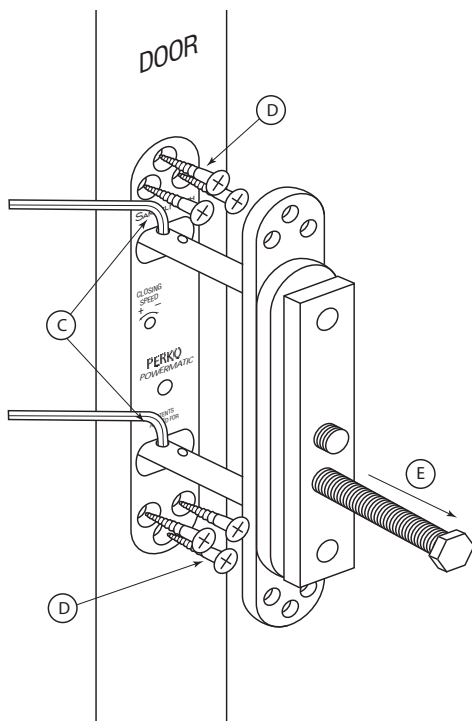

- Insert the allen keys (C) through both top and bottom link rod holes.


Both allen keys must be correctly located.

- Remove extractor bolt.
- Secure door plate to door with six screws (D).

IMPORTANT


With composite doors and door linings it is essential to drill pilot holes $\text{Ø } \frac{3}{32}"$ (2.5mm) to suit fixing screws.

7

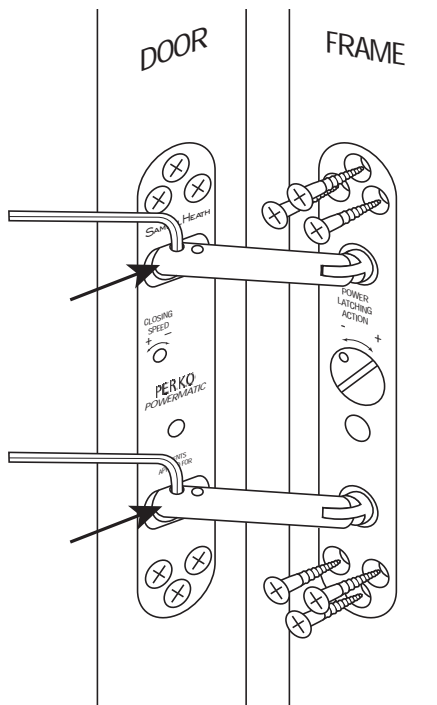


- With the closer secure and now held open by allen keys, if necessary firmly push both link rods across door plate and offer frame plate into frame void. Secure with six screws (D).
- Open door slightly and remove allen keys.
- Installation is now complete.

8 ADJUSTMENT - CLOSING SPEED

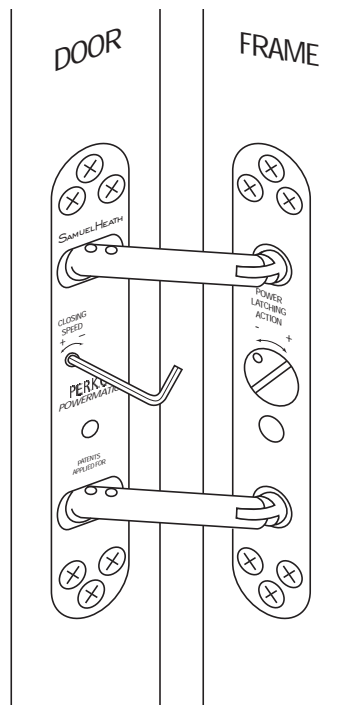

- Remove dust cap.
- Use one of the allen keys (C) to adjust closing speed.
- Positive (+) increases door speed. Negative (-) reduces door speed, as indicated on door plate.

9 ADJUSTMENT - POWER LATCHING ACTION

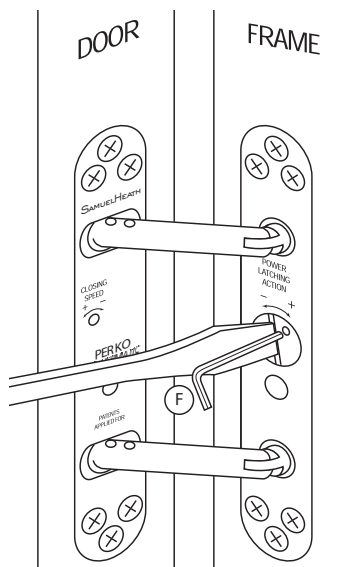

- The power latching action can be adjusted using a plain flat ended screwdriver.
- Loosen locking screw using allen key (F) to allow the adjuster screw to turn.
- Positive (+) increases the angle at which latching action engages. Negative (-) decreases angle at which the latching action engages.
- Re-tighten locking screw when correct power latching action achieved.

The Perkopower is protected by the following Patents and Applications.

CANADA	2365822 2436363
HONG KONG	1038953
JAPAN	2000-602490
SINGAPORE	82862
TAIWAN	156554
USA	6625847 2004/0111831
UK	GB25447175 GB2415014 EP1605126

AUSTRIA	EP1605126
BELGIUM	
DENMARK	
FRANCE	
GERMANY	
IRELAND	
ITALY	
LUXEMBOURG	
NETHERLANDS	
SPAIN	
SWEDEN	
SWITZERLAND	
LIECHTENSTEIN	

Samuel Heath & Sons plc



Leopold Street
Birmingham
B12 0UJ, England
Telephone: +44 (0)121 772 2303
Fax: +44 (0)121 772 3334
Sales office direct line: 0121 766 4200
E-mail: info@samuel-heath.com

www.samuel-heath.com / www.perko-powermatic.com

US Customer Service
111 East 39th Street, Suite 2R
New York N.Y. 10016
Telephone: (212) 599 5177
Fax: (212) 818 9552
E-mail: usa@samuel-heath.com

9-395
NOV 2009
10K

*This template is for right hand hung doors (when viewing closing face).
For left hand hung doors turn upside down.

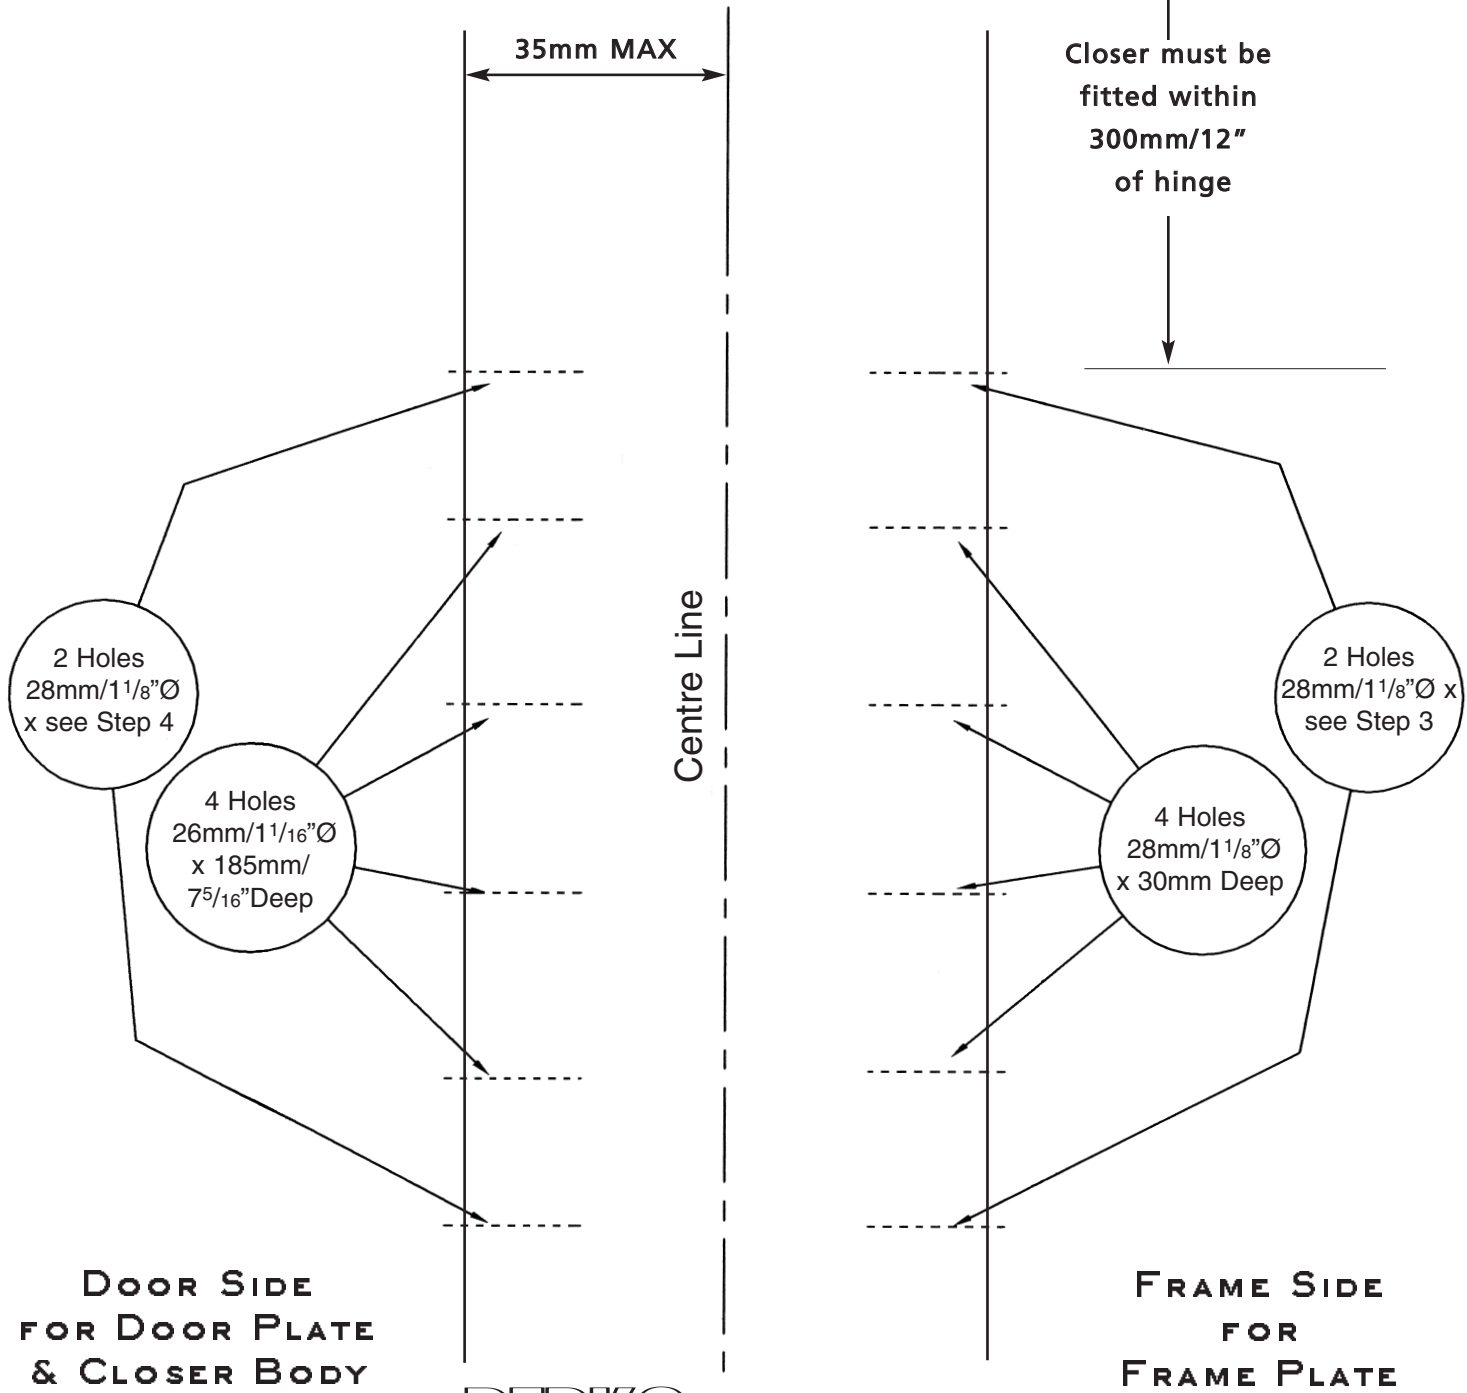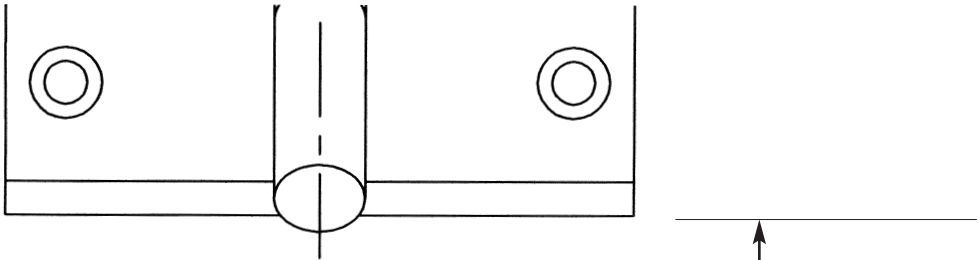

PERKO
POWERMATIC®
TEMPLATE